

Installation

POWER PACK

- Mount to any junction box through a ½" knockout (note: chase nipple is long enough to accommodate mounting inside an adjacent box if necessary for local code requirements)
- Connect Class 1 wires to line voltage feed and load
- Interconnect unit (via RJ-45 ports) with other nLight devices in lighting zone using CAT-5 cables
- Once power is received via CAT-5 connection, all devices in zone will automatically begin functioning together according to each device's defaults

