 
WORLD-BEAM® QS18 Series Sensor



Instruction Manual

Miniature Self-Contained Photoelectric Sensors in Universal Housing



- Easily fits (or retrofits) almost any mounting situation
- Exceptional optical performance, comparable to larger "MINI-style" or barrel sensors
- 10 V dc to 30 V dc operation, with complementary (SPDT) NPN or PNP outputs, depending on model
- Bright LED operating status indicators are visible from 360°
- Rugged sealed housing, protected circuitry
- Models available with or without 18 mm threaded "nose"
- · Less than 1 millisecond output response for excellent sensing repeatability
- Choose 2 m (6.5 ft) or 9 m (30 ft) cable or 150 mm (6 inch) Pico-style cabled QD



WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

Models

Model 1	Opposed Mode	Range	Output
QS186EV (624 nm Visible red)	Effective beam: 13 mm (0.5 inch)		—
QS186E (940 nm Infrared)		20	_
QS18VN6R		20 m (66 ft)	NPN
QS18VP6R	OPPOSED OPPOSED		PNP
QS186EB (940 nm Infrared)	Effective beam: 13 mm (0.5 inch)		_
QS18VN6RB		3 m (10 ft)	NPN
QS18VP6RB	OPPOSED		PNP
Model 1	Polarized Retroreflective Mode	Range	Output
QS18VN6LP	630 nm Visible red		NPN
QS18VP6LP			PNP
Model 1	Retroreflective Mode	Range	Output
QS18VN6LV	628 nm Visible red		NPN
QS18VP6LV		6.5 m (21 ft)	PNP

• To order the 9 m (30 ft) PVC cable model, add the suffix "W/30" to the cabled model number. For example, QS186E W/30.

• To order the 4-pin M12/Euro-style integral quick disconnect model, add the suffix "Q8" to the model number. For example, QS186EQ8.

• To order the 4-pin M8/Pico-style integral quick disconnect model, add the suffix "Q7" to the model number. For example, QS186EQ7.

To order the 150 mm (6 in) PVC cable model with a 4-pin M12/Euro-style quick disconnect, add the suffix "Q5" to the model number.
 For example, QS186EQ5.

1




To order the 150 mm (6 in) PVC cable model with a 4-pin M8/Pico-style quick disconnect, add the suffix "Q" to the model number. For example, QS186EQ.

[•] Models with a quick disconnect require a mating cordset.

Model 1	Convergent Mode	Range	Output
QS18VN6CV15	630 nm Visible red		NPN
QS18VP6CV15	16 mm (0.63 in)		PNP
QS18VN6CV45			NPN
QS18VP6CV45	CONVERGENT VISIBLE RED	43 mm (1.7 in)	PNP
Model 1	Diffuse Mode	Range	Output
QS18VN6D	940 nm Infrared	(50 (10))	NPN
QS18VP6D		450 mm (18 in)	PNP
QS18VN6DL			NPN
QS18VP6DL	DIFFUSE	600 mm (24 in)	PNP
QS18VN6DB (Diffuse, wide)			NPN
QS18VP6DB (Diffuse, wide)	DIFUSE	450 mm (18 in)	PNP
Model 1	Divergent Mode	Range	Output
QS18VN6W	940 nm Infrared		NPN
QS18VP6W	DIVERGENT	100 mm (4 in)	PNP
Model 1	Fixed Field Mode	Range	Output
QS18VN6FF50		50 (01)	NPN
QS18VP6FF50	630 nm Visible red	50 mm (2 in)	PNP
QS18VN6FF100			NPN
QS18VP6FF100		100 mm (4 in)	PNP
QS18VN6FF150	Fixed-Field		NPN
QS18VP6FF150		150 mm (6 in)	PNP
Model 1	Plastic Fiber Optic Mode	Range	Output
QS18VN6FP	660 nm Visible Red		NPN
QS18VP6FP	PLASTIC FIBER	Range varies by sensing mode and fiber optics used	PNP
Model 1	Glass Fiber Optic Mode	Range	Output
QS18VN6F	940 nm Infrared		NPN
QS18VP6F		Range varies by sensing mode and fiber optics used	PNP

Wiring Diagrams

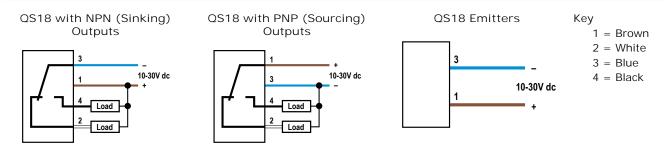


Quick disconnect (QD) wiring diagrams are functionally identical.

Installing Fibers

Cutting Unterminated Plastic Fibers QS18V..6FP

Unterminated plastic fibers are designed to be cut by the user to the length required for the application.

To facilitate cutting, a Banner model PFC-1 cutting device is supplied with the fiber. Cut the fiber as follows:

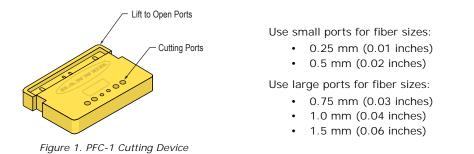

- 1. Locate the control end of the fiber (the unfinished end).
- 2. Determine the length of fiber required for the application. If using a bifurcated fiber, separate the two halves of the fiber at least 51 mm (2 inches) beyond the fiber cutting location.
- 3. Lift the top (blade) of the cutter to open the cutting ports.
- 4. Insert one of the control ends through one of the cutting ports on the cutter so that the excess fiber protrudes from the back of the cutter.
- 5. Double-check the fiber length, and close the cutter until the fiber is cut.
- 6. Using a different cutting port, cut the second control end to the required length.



Note: To ensure a clean cut each time, do not use a cutting port more than once.

7. Gently wipe the cut ends of the fiber with a clean, dry cloth to remove any contamination. Do not use solvents or abrasives on any exposed optical fiber.

Installing Plastic Fibers QS18V..6FP

Follow these steps to install the plastic fibers.

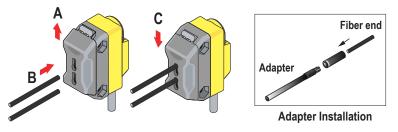


Figure 2. Installing Plastic Fibers

- 1. Slide the fiber gripper up to unlock it (A).
- 2. If using 0.25 mm or 0.5 mm core fibers, slide the plastic fiber adapters onto the fibers, flush with the fiber ends.
- 3. Carefully insert the prepared plastic fiber ends into the ports (B) as far as possible without applying extra force.
- 4. Slide the fiber gripper down to lock the fibers in place (C).

Installing Glass Fibers QS18V..6F

Follow these steps to install the glass fibers.

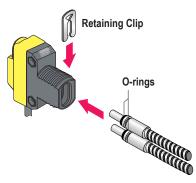


Figure 3. Installing Glass Fibers

- 1. Slide the supplied o-ring on the sensor end of the fibers, as shown.
- 2. Press the fiber ends firmly into the ports located on the front of the sensor.
- 3. Slide the supplied u-shaped retaining clip into the slot in the sensor's barrel until the clip snaps into place.

Specifications

Supply Voltage

10 V to 30 V dc (10% maximum ripple) at less than 25 mA, exclusive of load

Protected against reverse polarity and transient voltages

Light Source

Glass Fiber Optic, Opposed and Diffuse mode models: Infrared, 940 nm Plastic Fiber Optic, Retroreflective, Convergent models: Visible red, 660 nm

Fixed-Field models: Visible red, 630 nm

Adjustments

Glass Fiber Optic, Plastic Fiber Optic, Convergent, Diffuse, and Retroreflective mode models (only): Single-turn sensitivity (Gain) adjustment potentiometer

- Indicators
 - 2 LED indicators on sensor top:

Green solid: Power on Amber solid: Light sensed

Amber sond. Light se

Amber flashing: Marginal excess gain (1 to 1.5 times excess gain) Required Overcurrent Protection

 \wedge

WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply. Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.


Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

Repeatability


Opposed Mode: 100 microseconds DL and FF Modes: 90 microseconds All Other Modes: 150 microseconds Output Configuration Solid-state complementary (SPDT): NPN or PNP (current sinking or sourcing), depending on model; Rating: 100 mA maximum each output at 25 °C DL and FF Modes ON-state Saturation Voltage: less than 1.5 V at 10 mA; less than 3 V at 100 mA All Other Modes: ON-state Saturation Voltage: less than 1 V at 10 mA; less than 1.5 V at 100 mA Protected against false pulse on power-up and continuous overload or short circuit of outputs Output Response Opposed Mode: 750 microseconds ON; 375 microseconds OFF FF and DL Modes: 850 microseconds ON/OFF All Other Modes: 600 microseconds ON/OFF Note: 100 millisecond delay on power-up; outputs do not conduct during this time Construction ABS housing 3 mm mounting hardware included Connections 2 m (6.5 ft) 4-wire PVC cable, 9 m (30 ft) 4-wire PVC cable, 4-pin Picostyle or Euro-style QD, 4-pin Pico-style or Euro-style 150 mm (6 in) QD, depending on model Environmental IEC IP67; NEMA 6 **Operating Conditions** Temperature: -20 °C to +70 °C (-4 °F to +158 °F) 95% at +50 °C maximum relative humidity (non-condensing) Certifications


Note: For performance specifications of the FF50 and FF100 models built prior to date code 17090, refer to document p/n 63908.

Dimensions and Features

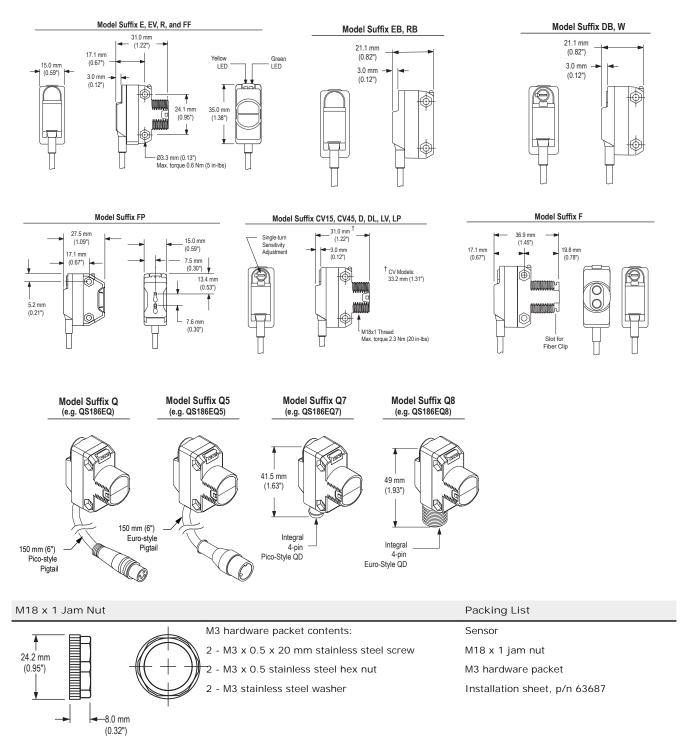

Performance Curves

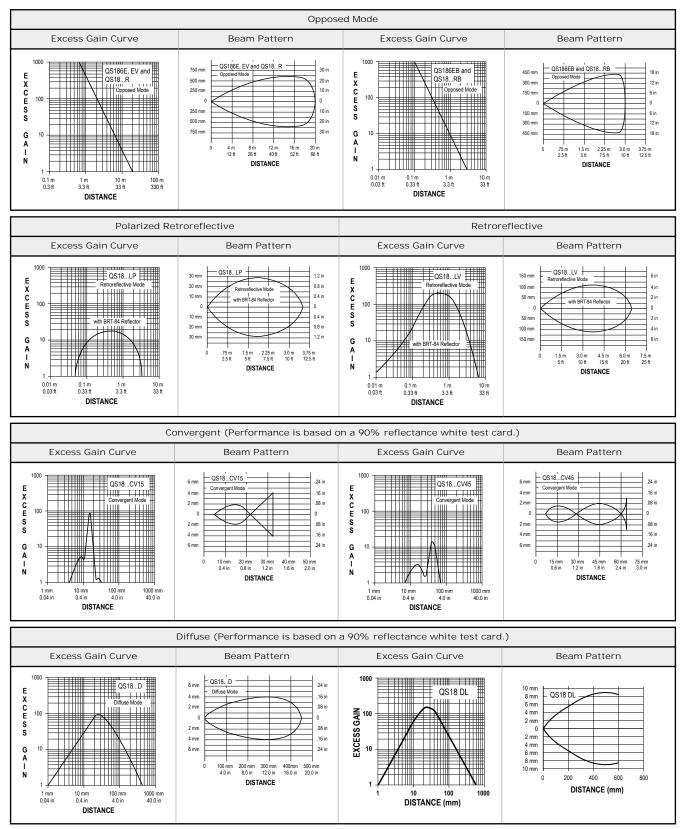

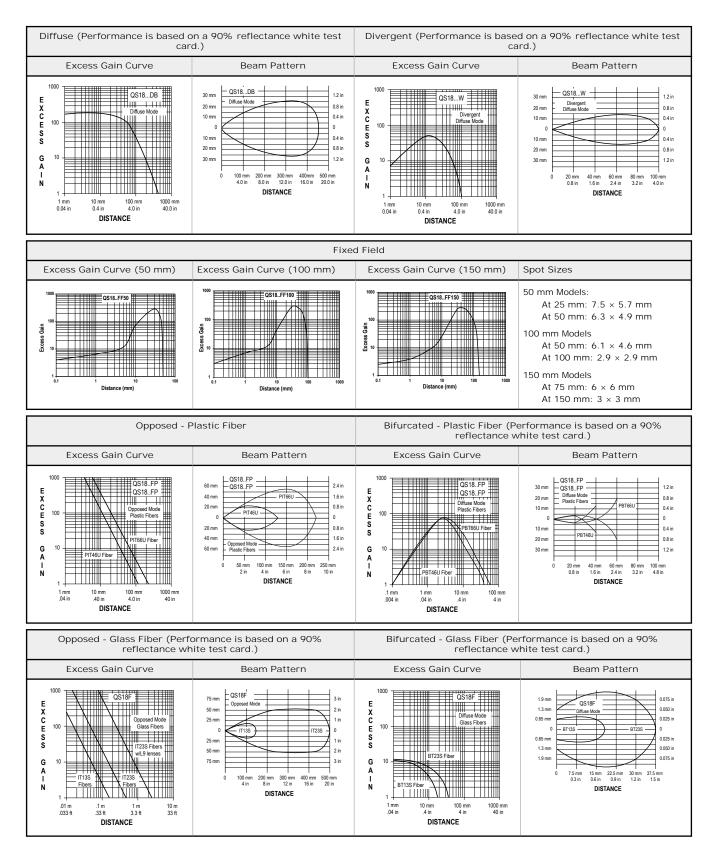

Accessories

Cordsets

4-Pin Threaded M12/Euro-Style Cordsets					
Model	Length	Style	Dimensions	Pinout (Female)	
MQDC-406	1.83 m (6 ft)		⊣−−−−− 44 Typ. −−−− −		
MQDC-415	4.57 m (15 ft)	- Straight			
MQDC-430	9.14 m (30 ft)				
MQDC-450	15.2 m (50 ft)		ø 14.5 –		
MQDC-406RA	1.83 m (6 ft)	Right-Angle	32 Typ.	4	
MQDC-415RA	4.57 m (15 ft)				1 = Brown
MQDC-430RA	9.14 m (30 ft)			2 = White	
MQDC-450RA	15.2 m (50 ft)		M12 x 1 → → → ø 14.5 [0.57"] → →	3 = Blue 4 = Black	

4-Pin Snap-on M8/Pico-Style Cordsets				
Model	Length	Style	Dimensions	Pinout (Female)
PKG4-2	2 m (6.56 ft)	Straight	→ 32 Typ. → → → → → → → → → →	4
PKW4Z-2	2 m (6.56 ft)	Right-Angle	− 29 Typ. − + 15 Typ. Ø 10.9 − +	1 = Brown 2 = White 3 = Blue 4 = Black

WORLD-BEAM QS18 Brackets

SMB18A

- Right-angle mounting bracket with a curved slot for versatile orientation
- 12-ga. stainless steel
- 18 mm sensor mounting hole
- Clearance for M4 (#8)
 hardware

Hole center spacing: A to B = 24.2 Hole size: A = ø 4.6, B = 17.0 \times 4.6, C = ø 18.5

SMB312S

 Stainless steel 2-axis, side-mount bracket



A = 4.3 × 7.5, B = diam. 3, C = 3 × 15.3

All measurements are in millimeters.

Retroreflective Targets

Go to *www.bannerengineering.com* or see the Accessories section of your current Banner Engineering Corp catalog for complete information.



Note: Polarized sensors require corner cube type retroreflective targets only.

Plastic and Glass Fiber Optics

Go to *www.bannerengineering.com* or see the Accessories section of your current Banner Engineering Corp catalog for a list of plastic and glass fiber optic cables.

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranty. Any modifications to this product without prior express approval specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

